



2002 PSYLO U-TURN SERVICE GUIDE (FOR C, XC & SL)

Table of Contents

| | |
|---|----|
| Tools Needed | 2 |
| Remove Lower Tube Assembly | 2 |
| Remove Damper Assembly (Right Side) | 3 |
| Remove the U-turn Spring Assembly (Left Side) | 4 |
| Install the U-Turn Spring and Damper Assemblies | 5 |
| Clean the Upper Tubes | 5 |
| Install the Lower Tube Assembly | 6 |
| Warranty | 7 |
| 2002 Psylo C | 8 |
| 2002 Psylo XC | 9 |
| 2002 Psylo SL | 10 |
| International Distributors | 12 |

For exploded diagram and part number information, refer to the 2002 Spare Parts Catalog, P/N 950-006157-00. Contact your local distributor or visit the RockShox website at www.rockshox.com for ordering information.

Information contained in this publication is subject to change at anytime without prior notice. For the latest technical information, visit our website at www.rockshox.com. Names used in this manual may be trademarks or registered trademarks of others.

TOOLS NEEDED

- 2.5 and 5 mm Hex Wrench
- Oil Pan
- Torque Wrench
- Plastic Face Mallet
- 24 mm 6-point Socket
- Small Blade Screwdriver
- Snap ring pliers
- 12" long cylindrical rod (plastic or wood)
- RockShox 5 wt. Oil
- RockShox RedRum
- Safety Glasses

After every 50 hours of riding or less depending on riding conditions and riding style, the following service should be performed. This service should be performed by a qualified mechanic, using proper tools.

NOTE: SERVICE ON YOUR FORK MAY BE PERFORMED WHILE STILL INSTALLED ON YOUR BICYCLE. USE THE EXPLODED VIEWS AT THE END OF THIS GUIDE TO IDENTIFY AND REFERENCE PARTS.

FOR INFORMATION REGARDING PURE SYSTEM SERVICE (PSYLO SL), REFER TO THE PURE SYSTEM SERVICE GUIDE ON OUR WEBSITE AT WWW.ROCKSHOX.COM.

REMOVE LOWER TUBE ASSEMBLY

1. Use a 2.5mm hex wrench to remove the screw on top of the U-Turn adjuster knob. Slowly remove the U-Turn adjuster knob.

NOTE: TAKE CARE NOT TO LOSE DETENT BALLS (3). THE DETENT BALLS ARE SPRING LOADED!

2. Using a magnet, remove detent balls and springs from the top cap. Note orientation of detent balls and springs within the top cap, they must be reinstalled in the same orientation.



2002 PSYLO U-TURN SERVICE GUIDE

- Psylo XC/SL: Gently pull downward to remove the external rebound adjuster knob from the right shaft bolt.

TIP: RIGHT AND LEFT SIDE IS DETERMINED FROM THE RIDER'S PERSPECTIVE.

- With a 5 mm hex wrench, loosen the shaft bolts five turns and firmly tap them with a plastic faced mallet to separate the shafts from the lower tubes.

TIP: TAPPING THE BOLTS RELEASES THE PRESSURE FIT BETWEEN THE LOWER LEGS AND THE SHAFTS.

- Keep an oil pan below the fork to catch the oil. Inspect the condition of removed oil. If the oil is opaque and/or milky (water contamination), the lower tube assembly should be cleaned.
- Remove shaft bolts completely.



- Carefully slide the lower tube assembly off of the upper tubes. Use the oil pan to catch the excess oil.

NOTE: CYCLE THE DAMPER SHAFT (RIGHT SIDE) UP AND DOWN TO ENSURE ALL OIL IS REMOVED.


- Apply biodegradable solvent (Simple Green, Pedros, or isopropyl alcohol) to a clean rag and wrap a rag around a long cylindrical rod or screwdriver to clean the lower tube internals. Dry thoroughly.




REMOVE DAMPER ASSEMBLY (RIGHT SIDE)

Steps 9 and 10 apply to Psylo C and XC only. Use the Pure System Service Guide to remove the assemblies on the Pure side of the Psylo SL.

- Using snap ring pliers, remove the snap ring from the right upper tube (damper side).

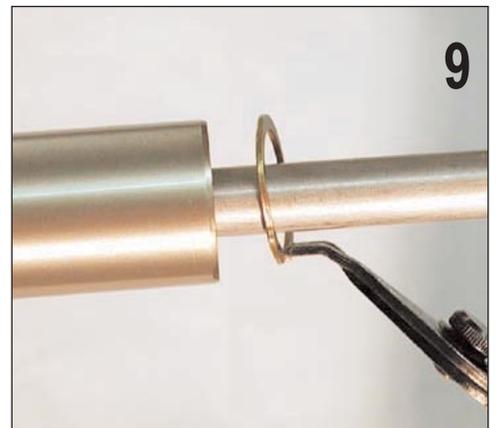


- Remove the damper assembly from the right upper tube and inspect the o-ring for wear or damage. Replace each as necessary (Damper Assembly Kit: 110-005590-00; and Damper O-ring Bulk Packs 110-006452-10 or 110-006452-50).

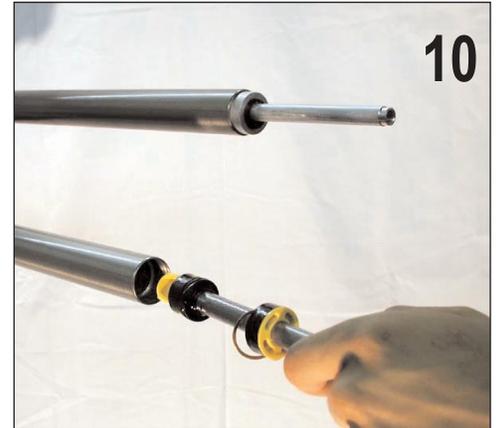


REMOVE THE U-TURN SPRING ASSEMBLY (LEFT SIDE)


- Remove the snap ring from the bottom of the left upper tube using snap ring pliers.

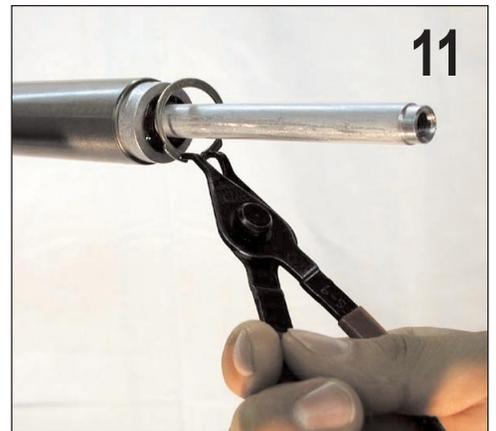

- Carefully remove the base plate assembly from the U-Turn plunger shaft. Replace the assembly as necessary (110-006268-00).

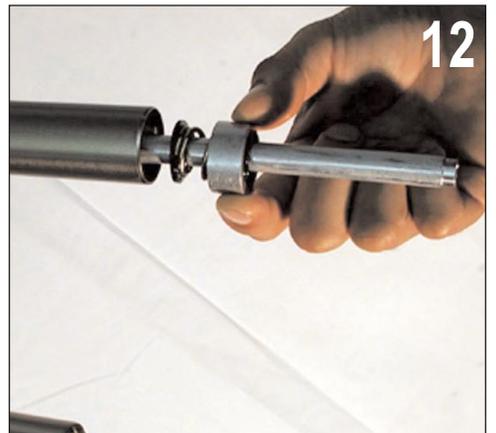


- With a 24 mm socket, remove the top caps. **For Psylo SL: See the Pure System Service Guide for removal of the Climb-it Control adjuster knob and top cap assembly.**

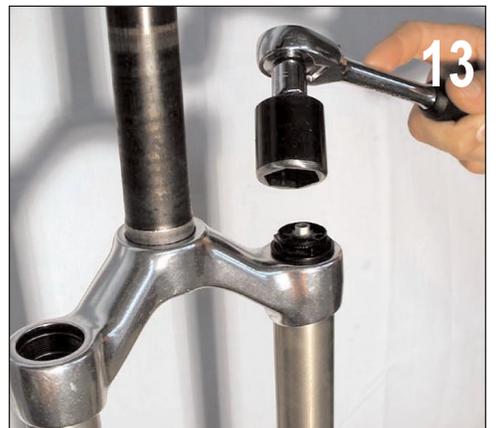

2002 PSYLO U-TURN SERVICE GUIDE

14. Remove the U-Turn spring assembly. Clean and reapply Judy Butter to the spring and spring isolator. Inspect top cap o-ring. To change springs to a softer or firmer rate, or replace the U-Turn spring assembly, use the following kits:

| Description | Part Number | Rider Weight |
|-------------------------------------|---------------|-----------------------------|
| U-Turn Assembly Kit, Soft | 110-006270-01 | ←140 lb (63 kg) |
| U-Turn Assembly Kit, Med (standard) | 110-006270-02 | 140 to 170 lb (63 to 77 kg) |
| U-Turn Assembly Kit, Firm | 110-006270-03 | →170 lb (77 kg) |

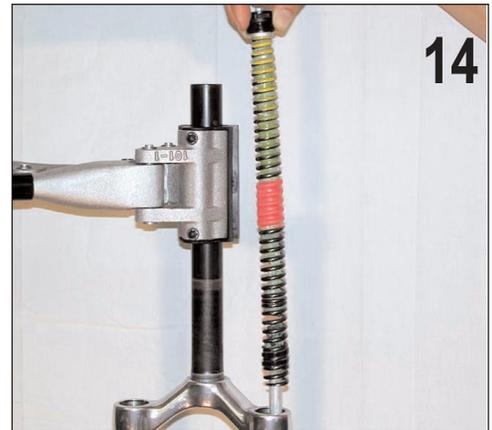


CLEAN THE UPPER TUBES

15. Apply biodegradable solvent (Simple Green, Pedros or isopropyl alcohol) to a clean rag, wrap rag around a long cylindrical rod or screwdriver and clean the upper tube internals. Dry thoroughly.

NOTE: USE CARE NOT TO SCRATCH THE INNER SURFACE OF THE TUBES.




16. Install the base plate assembly (110-006268-00) w/snap ring into the bottom of the left upper tube.

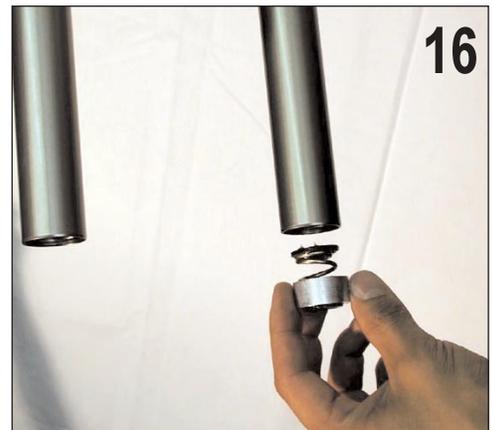

INSTALL THE U-TURN SPRING AND DAMPER ASSEMBLIES

17. Ensure the U-turn spring assembly rod is fully extended to 125 mm and install the assembly through the top of the left upper tube.

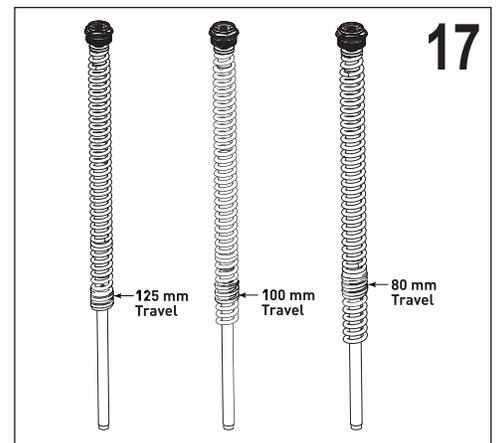

18. Press firmly and hand thread the U-Turn top cap 1.5-2 turns to start threads and prevent stripping the top cap. With a 24 mm socket torque the U-turn top cap to 40 in-lb.
19. **Psylo C and XC:** Install the damper assembly into the right upper tube and insert the snap ring.
Psylo SL: Use the Pure System Service Guide to install the assemblies on the Pure side of the Psylo SL.
20. Install springs and detent balls into the U-Turn top cap. Be sure to install them in the same orientation that they were removed (see step 2 photo).
21. Using a 2.5 mm hex wrench, install the U-Turn adjuster knob and screw. Torque the screw to 12 in-lb.

NOTE: DO NOT USE LOCTITE ON THE SCREW, IT WILL DAMAGE THE PLASTIC U-TURN ADJUSTER KNOB



INSTALL THE LOWER TUBE ASSEMBLY

22. Carefully slide the lower leg assembly onto the upper tube assembly. Stop when you feel/hear the lower bushing engage the upper tube. This will allow room to pour oil into the lower leg bolt hole.
TIP: CHECK YOUR DUST SEALS TO ENSURE PROPER FIT AROUND THE UPPER TUBES.
23. Invert the fork, and add 20cc of RockShox 5wt oil into the bottom of the left lower leg (U-Turn side), through the bolt hole.

TIP: THE U-TURN SHAFT SHOULD NOT BE SET IN THE LOWER LEG CASTING YET. THIS WILL ALLOW CLEARANCE FOR THE OIL TO FILL THE LEG.

24. Inspect the nylon crush washers for wear or damage. Replace if necessary. Install U-Turn shaft bolt and torque to 60 in-lb.



25. Turn the fork right-side up. Insert a long plastic or wooden rod through the top of the right upper tube and lightly seat the damper into the casting. This will enable you to thread the shaft bolt into the damper.

26. **Psylo XC and SL only:** Insert the rebound adjuster knob into the damper and turn rebound valve to the full clockwise position BEFORE installing the shaft bolt.

IMPORTANT!: THIS PREVENTS DAMAGE TO THE PLASTIC REBOUND ASSEMBLY IN THE SHAFT. REMOVE THE REBOUND ADJUSTER KNOB.

27. Install the hollow (**solid bolt on Psylo C**) shaft bolt into damper shaft and torque to 60 in-lb. Insert the rebound adjuster knob through the hollow shaft bolt and press firmly to seat.



28. **Psylo C and XC only:** Add 140cc of RockShox 5 wt. oil into the top of the right upper tube (through the top cap hole).

Psylo SL: See the Pure System Service Guide for the appropriate refill fluid level for the right side.

29. Using a 24mm socket, install the top cap on the damper side (right). Torque to 40 in-lb.

For Psylo SL: See the Pure System Service Guide for installation of the Climb-It control adjuster knob and top cap assembly.





2002 PSYLO U-TURN SERVICE GUIDE

WARRANTY

RockShox, Inc. warrants its products for a period of one year from original date of purchase to be free from defects in materials or workmanship. Any RockShox product that is returned to the factory and is found by RockShox to be defective in materials or workmanship will be repaired or replaced at the option of RockShox, Inc. This warranty is the sole and exclusive remedy. RockShox shall not be held liable for any indirect, special, or consequential damages.

The warranty does not apply to products which have not been properly installed and adjusted according to RockShox installation instructions. The warranty does not cover any product that has been subject to misuse or whose serial number has been altered, defaced or removed. This warranty does not cover paint damage or modifications to the product. Proof of purchase is required.

WARRANTY REPAIR


If for any reason it should be necessary to have warranty work done, return the product to the place of purchase. In the USA, Dealers should call for a Return Authorization number (RA#) prior to returning product.

Products returned for inspection must be sent freight prepaid and with proof of purchase to:

RockShox, Inc.
1610 Garden of the Gods
Colorado Spring, CO 80907


For more technical information, visit our website at www.rockshox.com. For toll-free technical support in the USA, call 1.800.677.7177.

Customers in countries other than the USA should contact their local dealer or distributor.

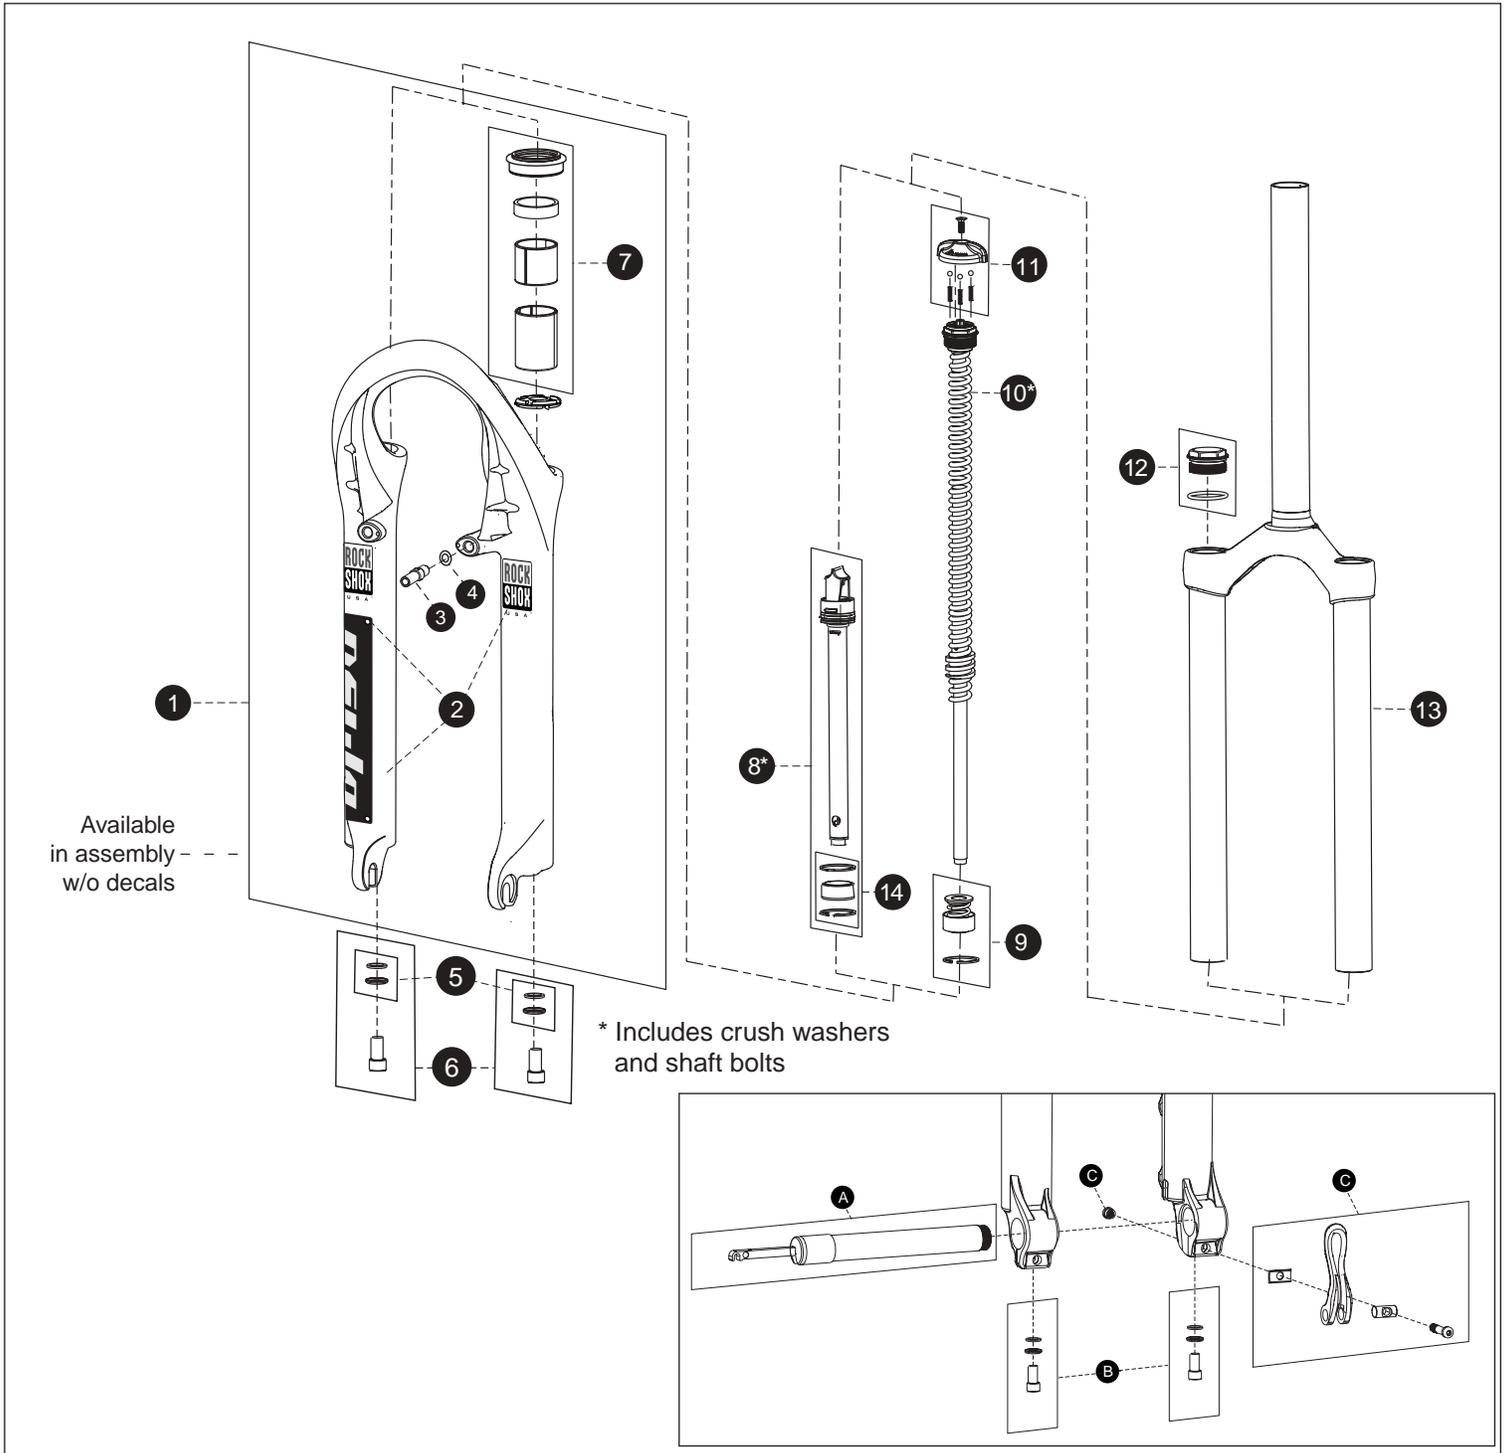

| | | | | | | | | |
|---|--|---------------|----|---|---------------|------------------------|----------------------------------|---------------|
| 1 | Psylo LL, Conventional w/Boss, Black | 110-006267-00 | 7 | Psylo Revive Kit | 110-006350-00 | Tullio Hardware | | |
| | Psylo LL, w/Boss, Pearl Silver | 110-006267-08 | 8 | Psylo XC Damper Assy | 110-005590-00 | A | Tullio Axle Kit | 110-005653-00 |
| | Psylo Tullio LL, Disc Only, Black | 110-006272-00 | 9 | 02 U-turn Base Plate Assembly Kit | 110-006268-00 | B | Tullio External Hardware Kit | 110-005652-00 |
| | Psylo Tullio LL, Disc Only, Pearl Silver | 110-006272-08 | 10 | U- Turn Assembly Kit, Soft | 110-006270-01 | C | Tullio Lower Leg Hardware | 110-005654-00 |
| | Psylo LL, Disc Only Conventional, Black | 110-006298-00 | | U- turn Assembly Kit, Medium | 110-006270-02 | | | |
| | Psylo LL, Disc Only Conv., Pearl Silver | 110-006298-08 | | U- turn Assembly Kit, Firm | 110-006270-03 | | | |
| 2 | 02 Psylo C Steel Str Decal Kit | 110-006271-00 | 11 | U-turn Adjuster Knob Kit | 110-006269-00 | | Not Shown: | |
| | 02 Psylo C Aluminum Str Decal Kit | 110-006271-01 | 12 | Psylo XC Non-Adjustable Top Cap | 110-005605-00 | | Disc Brake Cable Accessory Kit | 110-006344-00 |
| 3 | Brake Post | 48131 | 13 | Psylo XC Crwn/SteelStr/Uppr, 1-1/8 Thrdless | 110-005594-00 | | Psylo C/XC Damper O-ring, Qty 10 | 110-006452-10 |
| 4 | Flat Washer | 52261 | | Psylo XC Crwn/AlumStr/Uppr, 1-1/8 Thrdless | 110-005668-00 | | Psylo C/XC Damper O-ring, Qty 50 | 110-006452-50 |
| 5 | Crush Washer Kit | 110-005552-00 | | | | | | |
| 6 | Hydra Air/ Hydra Coil Ext. Hardware Kit | 110-005651-00 | | | | | | |

2002 PSYLO XC

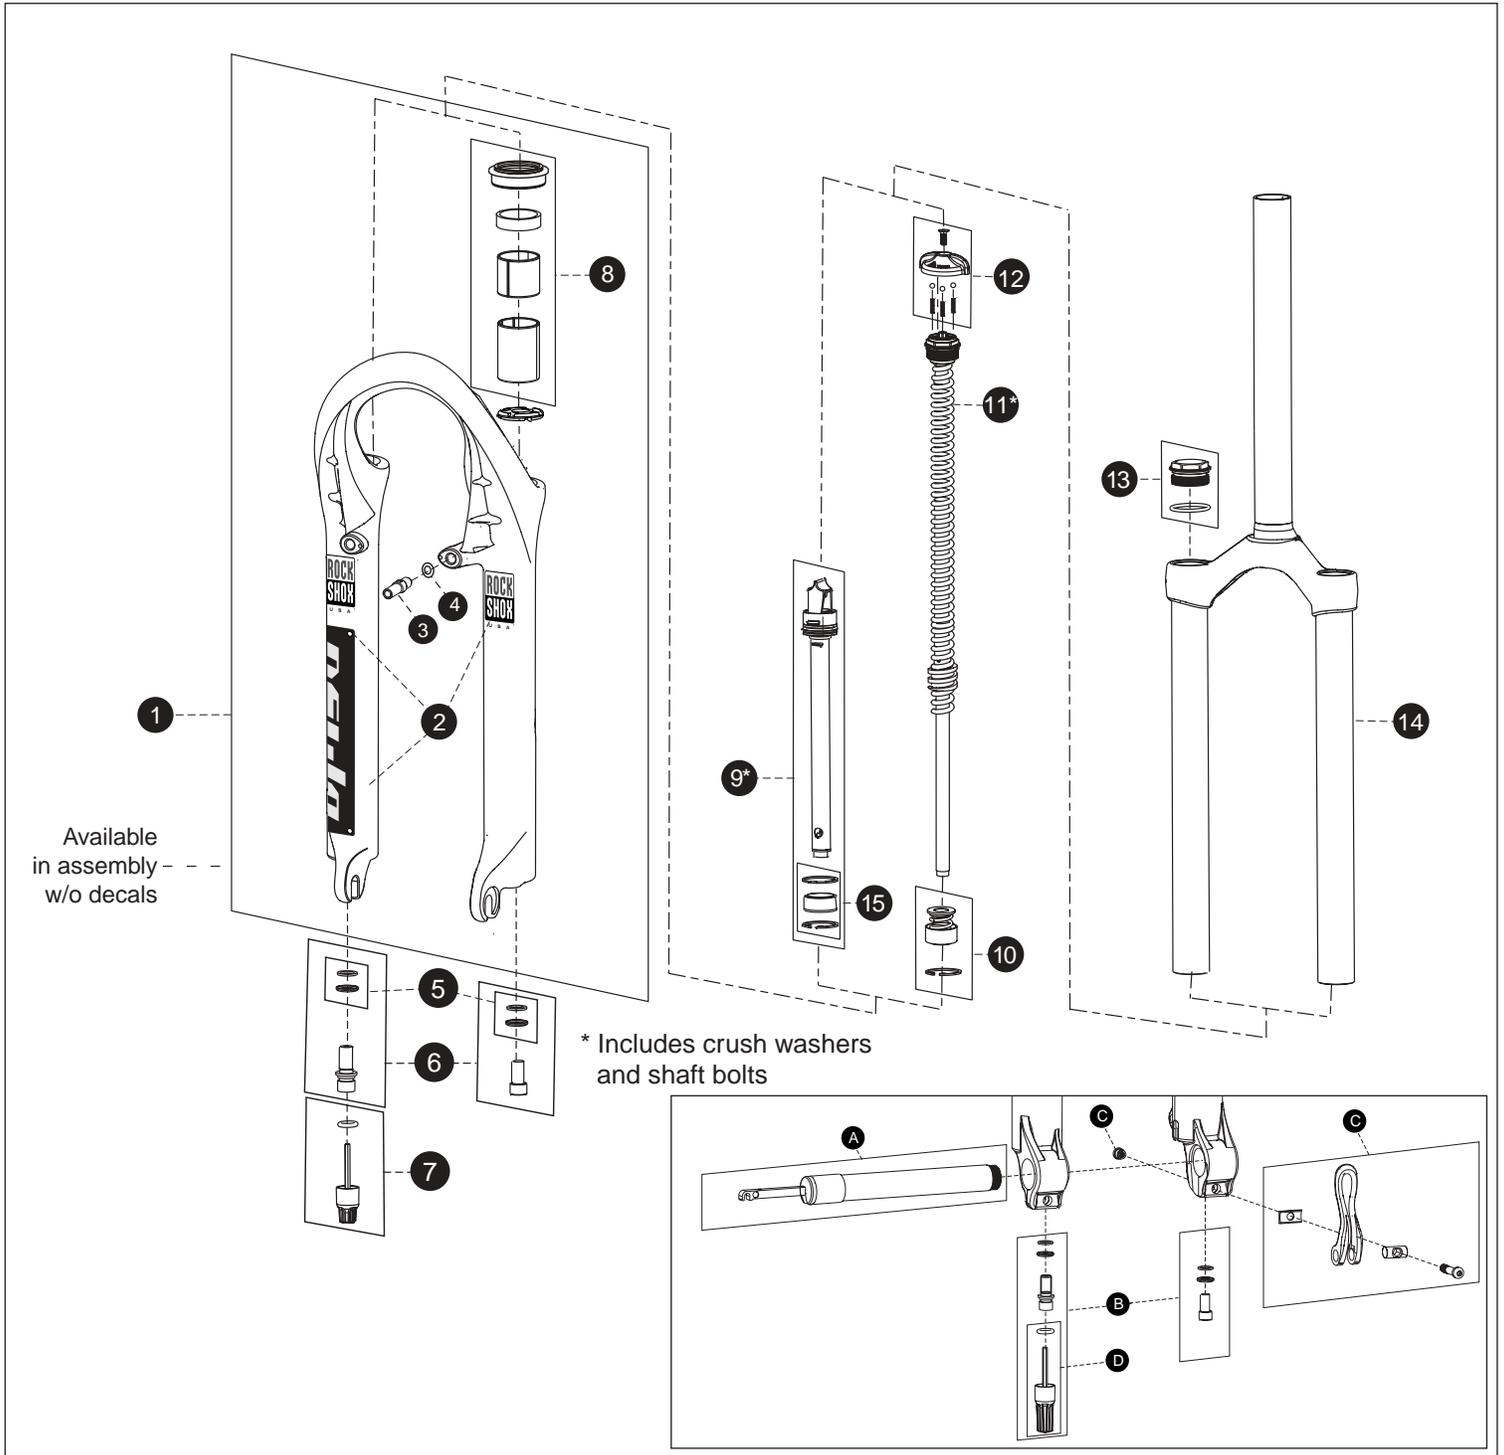


- 1 Psylo LL, Conventional w/Boss, Black 110-006267-00
- Psylo LL, w/Boss, Silver 110-006267-08
- Psylo Tullio LL, Disc Only, Black 110-006272-00
- Psylo Tullio LL, Disc Only, Silver 110-006272-08
- Psylo LL, Disc Only Conventional, Black 110-006298-00
- Psylo LL, Disc Only Conventional, Silver 110-006298-08
- 2 02 Psylo XC Steel Str Decal Kit 110-006273-00
- 02 Psylo XC Aluminum Str Decal Kit 110-006273-01
- 3 Brake Post 48131
- 4 Flat Washer 52261
- 5 Crush Washer Kit 110-005552-00
- 6 Hydra Air/ Hydra Coil Ext. Hardware Kit 110-005651-00

- 7 Psylo Conventional Rebound Adj. Knob 110-005603-00
- 8 Psylo Revive Kit 110-006350-00
- 9 Psylo XC Damper Assy 110-005590-00
- 10 U-turn Base Plate Assembly Kit 110-006268-00
- 11 U-turn Assembly Kit, Soft 110-006270-01
- U-turn Assembly Kit, Medium 110-006270-02
- U-turn Assembly Kit, Firm 110-006270-03
- 12 U-turn Adjuster Knob Kit 110-006269-00
- 13 01 Psylo XC Top Cap, Non-Adjust 110-005605-00
- 14 Psylo XC Crwn/SteelStr/Uppr, 1-1/8 Thrdless 110-005594-00
- Psylo XC Crwn/AlumStr/Uppr, 1-1/8 Thrdless 110-005668-00

- Tullio Hardware**
- A Tullio Axle Kit 110-005653-00
 - B Tullio External Hardware Kit 110-005652-00
 - C Tullio Lower Leg Hardware 110-005654-00
 - D Tullio Rebound Adjuster Knob Kit 110-006343-00

- Not Shown:**
- Disc Brake Cable Accessory Kit 110-006344-00
 - Psylo C/XC Damper O-ring, Qty 10 110-006452-10
 - Psylo C/XC Damper O-ring, Qty 50 110-006452-50

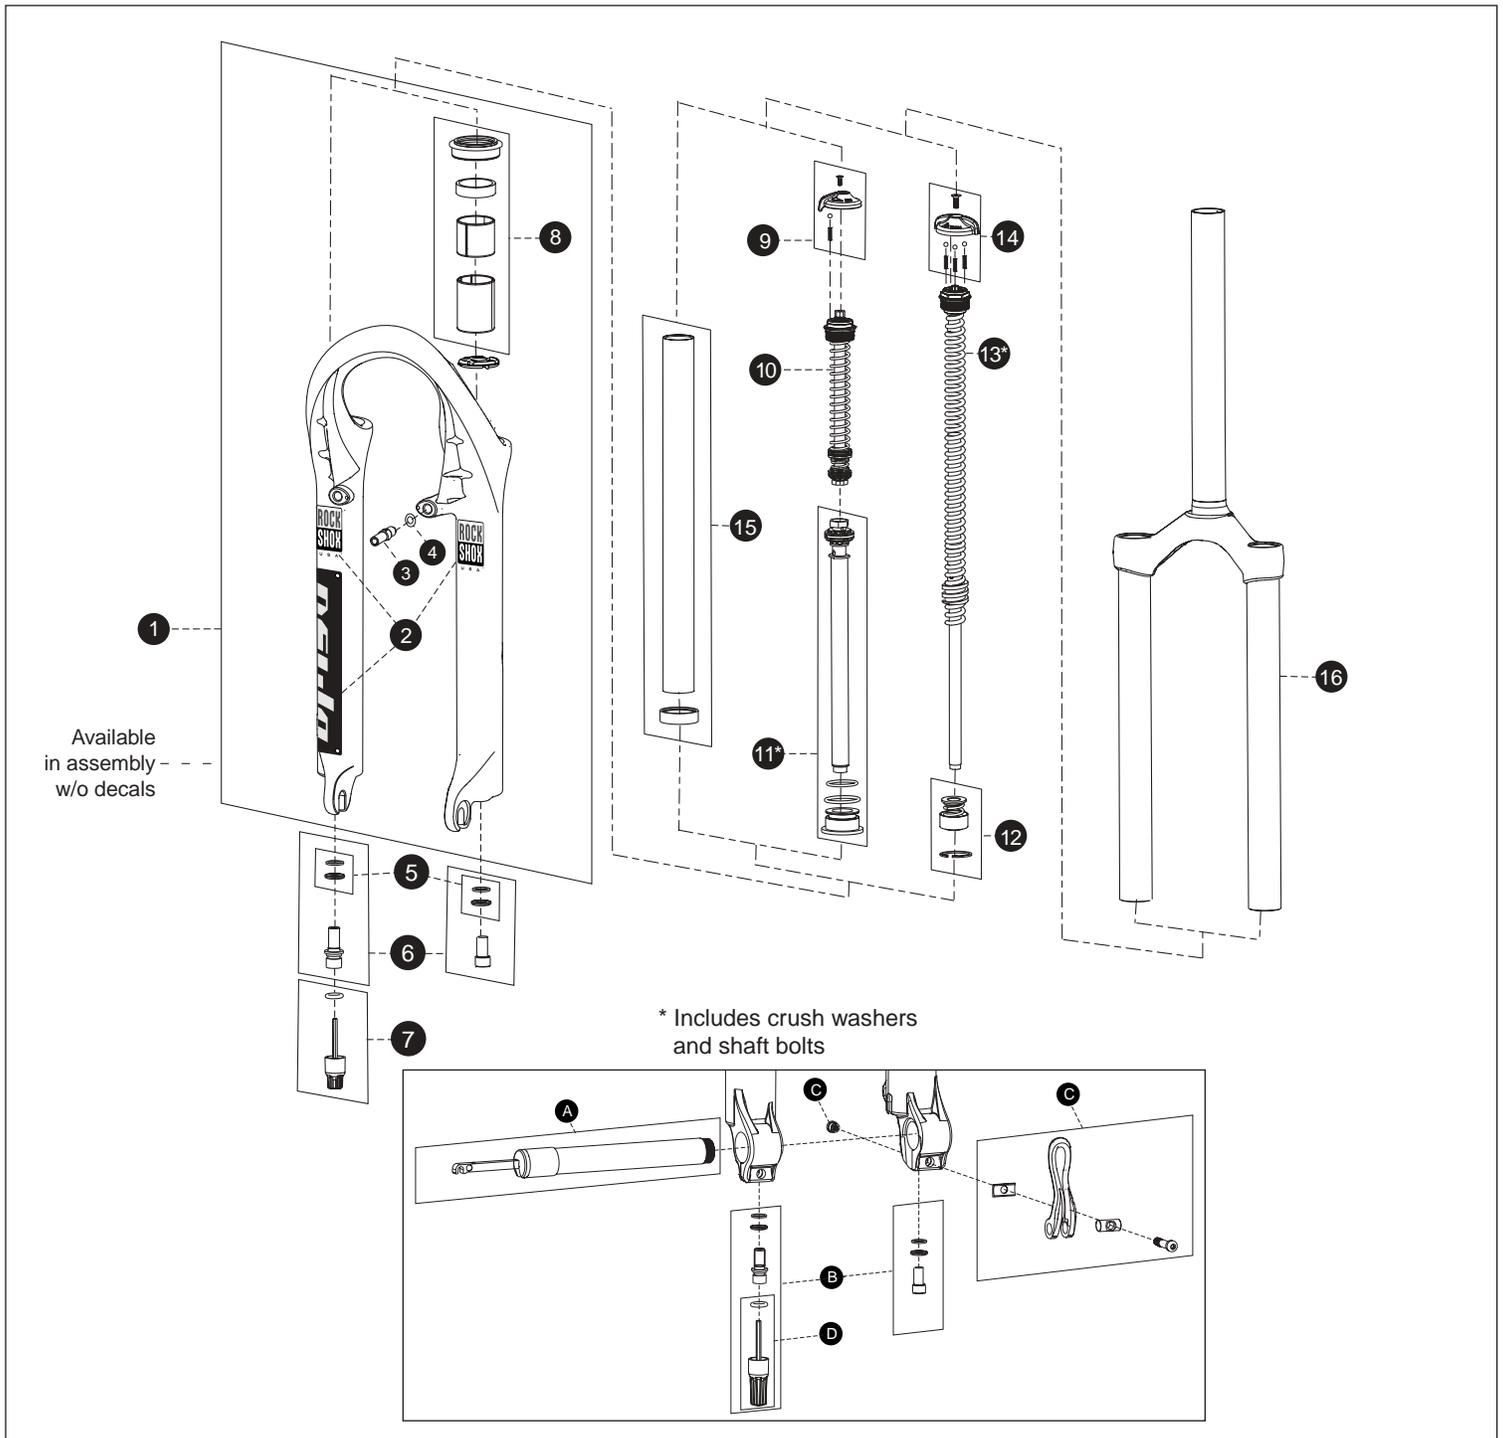

| | | | | | | | | |
|---|---|---------------|----|--|---------------|------------------------|-----------------------------------|---------------|
| 1 | Psylo LL, Conventional w/Boss, Black | 110-006267-00 | 9 | Climb-it Control Adjuster Knob | 110-005558-00 | Tullio Hardware | | |
| | Psylo, Conventional w/Boss, Pearl White | 110-006267-19 | 10 | 01 Psylo SL/Race Pure Compression Assy | 110-005586-00 | A | Tullio Axle Kit | 110-005653-00 |
| | Psylo Tullio LL, Disc Only, Black | 110-006272-00 | 11 | 01 Psylo SL/Race Rebound Assembly | 110-005589-00 | B | Tullio External Hardware Kit | 110-005652-00 |
| | Psylo Tullio LL, Disc Only, Pearl White | 110-006272-19 | 12 | U-turn Base Plate Assembly Kit | 110-006268-00 | C | Tullio Lower Leg Hardware | 110-005654-00 |
| | Psylo LL, Disc Only Conventional, Black | 110-006298-00 | 13 | U-turn Assembly Kit, Soft | 110-006270-01 | D | Tullio Rebound Adjuster Knob Kit | 110-006343-00 |
| | Psylo LL, Disc Only Conv., Pearl White | 110-006298-19 | | U-turn Assembly Kit, Medium | 110-006270-02 | | | |
| 2 | 02 Psylo SL Decal Kit | 110-006274-00 | | U-turn Assembly Kit, Firm | 110-006270-03 | Not Shown: | | |
| 3 | Brake Post | 48131 | 14 | U-turn Adjuster Knob Kit | 110-006269-00 | | Disc Brake Cable Accessory Kit | 110-006344-00 |
| 4 | Flat Washer | 52261 | 15 | Psylo Pure Tube | 110-005557-00 | | Pure Rebuild Kit | 110-006245-00 |
| 5 | Crush Washer Kit | 110-005552-00 | 16 | Psylo SL Crwn/Str/Uppr, 1-1/8 Thrdless | 110-005597-00 | | Pure Compression adjuster Rod Kit | 110-006324-00 |
| 6 | Hydra Air/Coil Ext.Hardware Kit | 110-005651-00 | | | | | | |
| 7 | Psylo Conventional Rebound Adj. Knob | 110-005603-00 | | | | | | |
| 8 | Psylo Revive Kit | 110-006350-00 | | | | | | |



2002 PSYLO U-TURN SERVICE GUIDE



INTERNATIONAL DISTRIBUTORS

Argentina

Broni S.A.
Phone: 54 11 4292 3000
FAX: 54 11 4292 4453
J.J. PASO 1260, (1832) LOMAS DE ZAMORA,
BUENOS AIRES

Australia

Steve Cramer Products
Phone: 61 3 9587 1466
FAX: 61 3 9587 2018
39 INDUSTRIAL DRIVE BRAESIDE, VICTORIA
3192

Austria

Barisitz-Austria
Phone: 43 0 5223 46444
FAX: 43 0 5223 46444-14
A-6060 Mils
Gewerbepark 12

Belgium

Vertex Cycle Systems BV
Phone: 31 23 57 18184
FAX: 31 23 57 18606
FLEMINGSTRAAT 100A, 2041 VL ZANDVOORT
HOLLAND

Bulgaria

Rog 2000
Phone: 3592 44 7042
FAX: 3592 943 3445
18, IVAN ASSEN STR.
1000 SOFIA

Brazil

Pedal Power
Phone: 55 11 3845 6997
FAX: 55 11 3845 6377
R. GOMES De CARVALHO 541
SAO PAULO SO
04547002

Canada

Cycles Lambert
Phone: 800 463-4452 (Quebec)
FAX: 800 461 1685
100 Rue des Riveurs
LEVIS, QUEBEC
G6V 9G3

Chile

Bicicletas Belda Limitada
Phone: 56 32 881799
FAX: 56 32 978799
14 NORTE 1001
VINA DEL MAR

Costa Rica

Inversiones Y Sistemas Garvi
Phone: 506 296 3383
FAX: 506 289 7013
P.O. BOX 4805-1000, SAN JOSE

Croatia

Ciklo-Centar
Phone: 385 1 234 22 24
FAX: 385 1 234 34 22
JURJA VES 30A
10000 ZAGREB

Czech Republic

Vanek Praha
Phone: 42 0 312 698 1889
FAX: 42 0 312 698 025
CERRENY UJEZD 185, UNHOST, 27351

Denmark

Duell A/S
Phone: 45 86 36 7800
FAX: 45 86 36 7377
MOLLERUPVEJ 3, TAASTRUP, 8410 RONDE

Ecuador

Bici Sport
Phone: 5932 248737
FAX: 5932 253691
AV DE DICIEMBRE 6327, ENTRE LOUVRE Y
TOMAS DE, BERLANGA.LOCAL #3, QUITO

Estonia

Hawaii Express
Phone: 372 6 398 508
FAX: 372 6 398 566
REGATI 1, 5K-102, TALLINN, 11911, Estonia
Or
Estonian Unidream
Phone: 372 636 7470
Fax: 372 636 7470
Paavli 2A, Tallinn
EE0004, Estonia

Finland

Mr. Cool OY
Phone: 358 9 3250817
FAX: 358 9 3250609
LINNAVUORENTIE 28, HELSINKI, 00950

France

Royal Velo France
Phone: 33 325 433 730
Fax: 33 325 43 95 95
4 RUE DES AZALEES, P.A. SUD-CHAMPANGE
ST THIBAUT, 10800

Germany

Sport Import GmbH
Phone: 49 44 05 9280 0
FAX: 49 44 05 9280 49
INDUSTRIESTRASSE 41 B, EDEWECHT, 26188

Greece

Gatsoulis Stefanos Imports
Phone: 30 12512 779
FAX: 30 12533 960
8 THESSALONIKIS STREET, NEW FILADELFIA,
ATHENS, T.T. 14342

Guatemala

BYS Importaciones S.A.
Phone: 502 366 7709
FAX: 502 363 3918
18 CALLE 7-48, ZONA 10, GUATEMALA

Holland

Vertex Cycle Systems BV
Phone: 31 23 57 18184
FAX: 31 23 57 18606
FLEMINGSTRAAT 100A, 2041 VL ZANDVOORT
HOLLAND

Hong Kong

Flying Ball Bicycle Company
Phone: 852 23813661
FAX: 852 23974406
201 TUNG CHOI ST. G/F, MONGKOK KOWLOON

Hungary

Prokero Ltd Co.
Phone: 361 331 3184
FAX: 361 331 3184
KALMAN IMRE UTCA 23, BUDAPEST, 1054

Iceland

Ornnin Hjól Ltd
Phone: 354 588 9892
FAX: 354 588 9896
SKEIFAN 11, P.O. BOX 8036, REYKJAVIK

Ireland

Madison
Phone: 44 20 8385 3385
Fax: 44 20 8385 3443
BUCKINGHAME HOUSE EAST, THE BROADWAY
STANMORE, MIDDLESEX HA7 4EA
UNITED KINGDOM

Israel

Becidan Cycles
Phone: 972 9 954 9165
FAX: 972 9 954 9165
92 SOKOLOV HERZELYA

Italy

Motorquality
Phone: 39 02 24 951 1
FAX: 39 02 24 951 228
20099 SESTO S. GIOVANNI, (MI) I VIA VENEZIA,
(ANG. VIA CARDUCCI), MILANO

Japan

Yoshigai Corporation
Phone: 81 6 4309 2530
FAX: 81 6 4309 2532
74-3 Nagata-Higashi,
Higashi-Osaka, Japan

Korea

OD Bike Inc.
Phone: 82 2 474 0818
Fax: 82 2 474 0656
3F 379-20 SUNGNAE-DONG, KANGDONG-KU,
SEOUL, 134-030

Latvia

Veloserviss
Phone: 371 750 1292
Fax: 371 750 1298
1/1 HAPSALAS ST., RIGA, LV-1005

Luxembourg

Vertex Cycle Systems BV
Phone: 31 23 57 18184
FAX: 31 23 57 18606
FLEMINGSTRAAT 100A, 2041 VL ZANDVOORT
HOLLAND

Malaysia

Gin Huat Cycle Trading
Phone: 603 6189 1663
FAX: 603 6189 1662
NO. 8, JALAN INDUSTRI BATU CAVES ½
TAMAN PERINDUSTRIAN BATU CAVES
68100 BATU CAVES
SELANGOR DARUL EHSAN

Mexico

Tekno Bike & Outdoor Prod.
Phone: 52 8 343 1550
FAX : 52 8 343 1275
Porfirio Diaz #469
Col Centro CP 6400
Monterey, NL Mexico

New Zealand

W.H. Whorrall & Co. Ltd.
Phone: 64 9 63 6 06 41
FAX: 64 9 63 6 06 31
43 FELIX ST
PENROSE, AUCKLAND
NEW ZEALAND

Norway

Hallman Sports
Phone: 46 18 56 16 00
FAX: 46 18 50 03 22
HALLNASGATAN 8, S-75228 UPPSALA, SWEDEN

Panama

Distribuidora Rali S.A.
Phone: 507 220-3844
FAX: 507 220-5303
VIA ESPANS EDIFICA CARCEP, P.O. BOX 87-0852,
PANAMA 7

Peru

Rojo Sports
Phone: 511 447 0838
FAX: 511 447 0838
AV. REPUBLICA DE, PANAMA 6513, LIMA 33

Poland

Giant Polska S.P. ZOO
Phone: 48 22 645 14 34
FAX: 48 22 645 14 36
AL NIEPODLEGLOSCI 221-4, 02-087 WARSZAWA

Portugal

Bicimax
Phone: 351 244 553276
FAX: 351 244 553187
APARTADO 34, 2431 MARINHA GRANDE

Russia

Sportex
Phone: 7095 288 4524
FAX: 7095 288 6888
KUDRINSKAYA PL., 1,, P.O.BOX 33, MOSCOW,
123242

St. Maarten

Tri-Sport International
Phone: 5995 43462
FAX: 5995 43928
8 AIRPORT BOULEVARD, SIMPSON BAY,
NAMIBIA

Singapore

Trekology Bikes 3
Phone: 65 466 2673
FAX: 65 466 7610
24 HOLLAND GROVE ROAD, SINGAPORE, 1545

Slovak Republic

Paul Lange Oslany
Phone: 42 1 862 5492 344
FAX: 42 1 862 5492 350
MIEROVA 854/37 OSLANY, 97247 SLOVAKIA

Slovenia

Proloco Trade
Phone: 386 64 380 200
FAX: 386 64 380 2022
ENOTA KRANJ, BRITOF 96A, 4000 KRANJ

South Africa

Coolheat (SA) (PTY) Ltd.
Phone: 27 11 807 5282
FAX: 27 11 807 2998
3 RUARGH STREET, PARK CENTRAL, P O BOX
740, JOHANNESBURG 2001

Spain

K. Motor Dealer S.L.
Phone: 34 9 1 637 70 97
FAX: 34 9 1 637 72 64
PARQUE INDUSTRIAL, EUROPOLIS EDIFICO
BRUSELA, BLOQUE 4, NAVE 1, LAS ROZAS
(MADRID), N/A, 28230

Sweden

Hallman Sports
Phone: 46 18 56 16 00
FAX: 46 18 50 03 22
HALLNASGATAN 8, S-75228 UPPSALA

Switzerland

Cilo Bike Service SA
Phone: 41 21 641 63 30
FAX: 41 21 641 63 82
CH. DE L'ORIO 30 A, CASE POSTALE 64, CH-
1032 ROMANEL S. LAUSANNE

Taiwan

Biketech Co. Ltd.
Phone: 886 22 694 5806
FAX: 886 22 694 6133
NO. 12 FU TEH ROAD, 266 LANE, 37 ALLEY
HSICHIH, TAIPEI HSIEN, TAIWAN, R.O.C.

Thailand

Probike Co. Ltd.
Phone: 662 254 1077
FAX: 662 254 1078
237/2 SARASIN ROAD, LUMPINNE, PATUMWAN,
BANGKOK, 10330

Turkey

EBSAT
Phone: 90 212 514 0525
FAX: 90 212 519 4846
EBSAT EMEK BISIKLET, EBUSUUD CAD NO.67,
34410 SIRKECI, ISTANBUL, 34410

United Kingdom

Madison
Phone: 44 20 8385 3385
Fax: 44 20 8385 3443
BUCKINGHAME HOUSE EAST, THE BROADWAY
STANMORE, MIDDLESEX HA7 4EA
UNITED KINGDOM

Venezuela

Bike Sports
Phone 582 751 9709
FAX: 582 753 5071
CENTRO COMERCIAL IBARRA, PLANTA BAJA,
LOCAL 3-A CALLE GARCILAZO, COLINAS DE
BELLO, 0, CARACAS